




10'

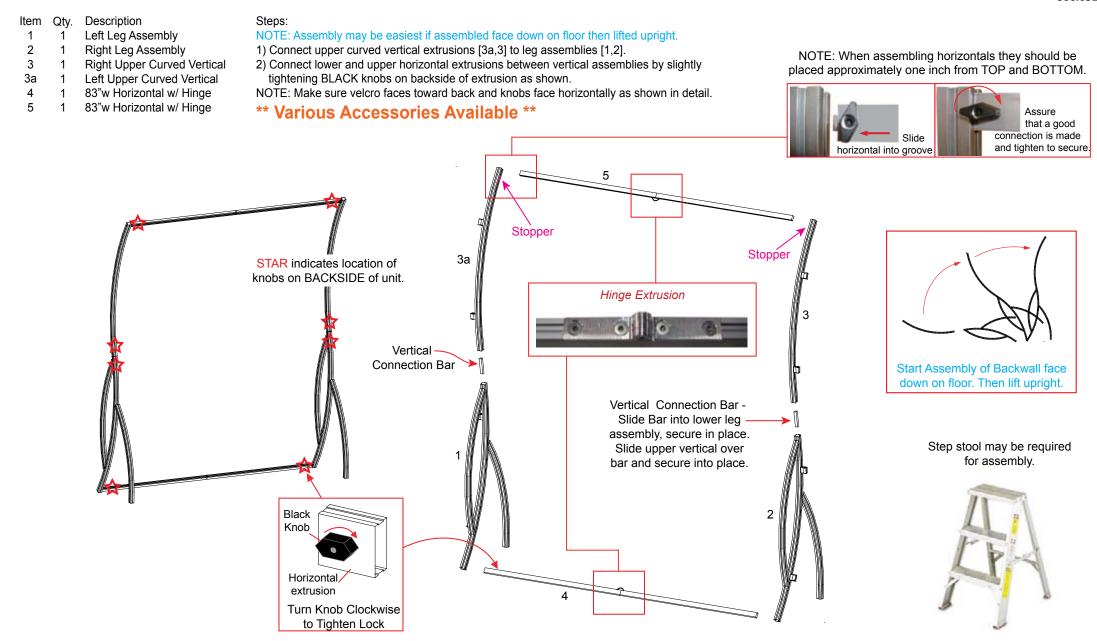



Accessary Attachment Attach header support to backwall then attach header to support with velcro. Header

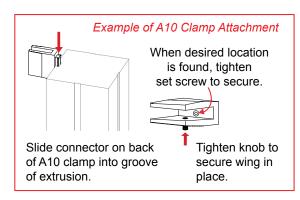

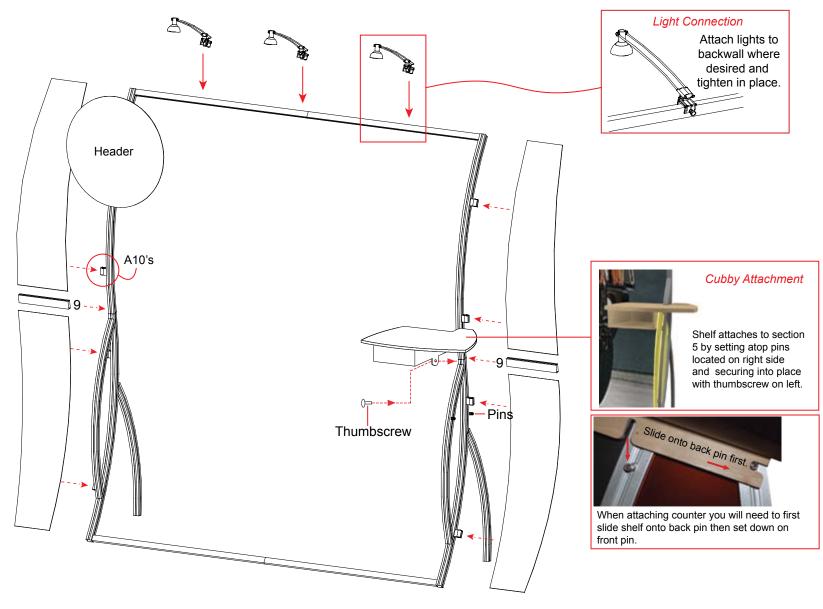



Part Number Description

A Left Leg Assembly
B Right Leg Assembly


C Horizontal Extrusion


D Horiontal Extrusion w/ Door Stopper


Steps

- 1) Connect lower horizontal extrusion [C] between bottom of leg assemblies [A and B] as shown.
- 2) Insert Laminated infill into grooves of leg assemblies [A and B].
- 3) Attach extrusion door between leg assemblies [A and B] and on top of laminated infill.
- 4) Attach upper horizontal extrusion w/ door stopper [D] between leg assemblies [A and B], and set flush with top of legs [A and B].

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion back and forth while turning knob until lock fully opens.

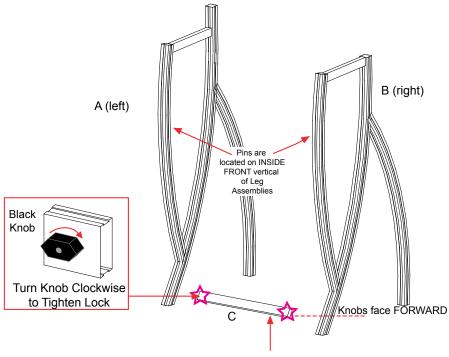



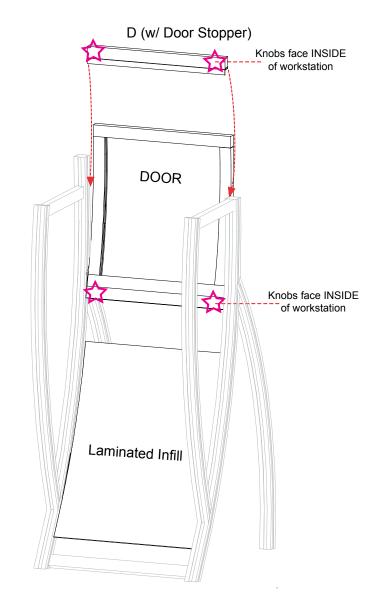




Part Number Description


E Horizontal ExtrusionF Horizontal Extrusion

Steps:

- 1) Attach horizontal extrusion [E] between vertical leg assemblies [A and B] as shown below.
- 2) Insert Laminated infill into grooves of vertical leg assemblies [A and B].
- 3) Attach upper horizontal extrusion [F] between vertical leg assemblies [A and B] atop infill.
- 4) Place internal shelf into assembled pedestal atop pins..
- 5) Set Counter atop assembled pedestal and secure with Velcro straps attached to underside of top.

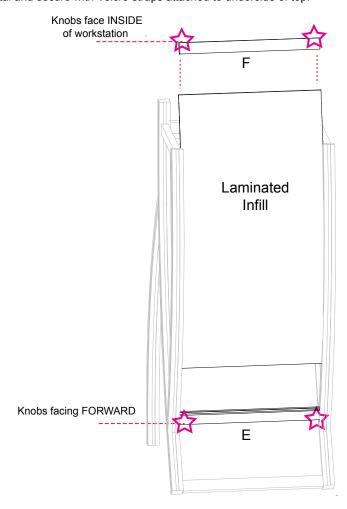

Place internal shelf into workstation then place counter atop assembled workstation.

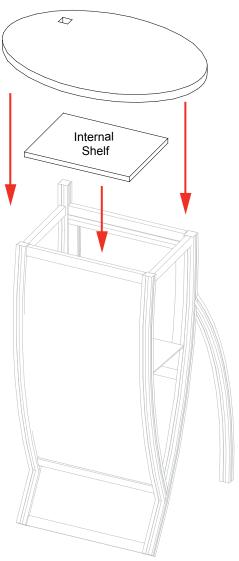



Part Number Description


G Curved Montior Mount Extrusion

Steps:

- 1) Slide connection bar into lower leg assembly. Slide upper vertical over bar and secure both.
- 2) Attach monitor mount to vertical as shown in detail below.

Monitor Mount Attachment

NOTE: Monitor mount should be installed while laying down on floor

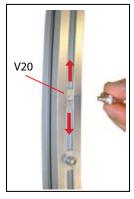


Adjust V20 connector to desired location.
Then remove screws.

www.classicexhibits.com



Place mount plate in front of V20 connectors. Then secure with screws.

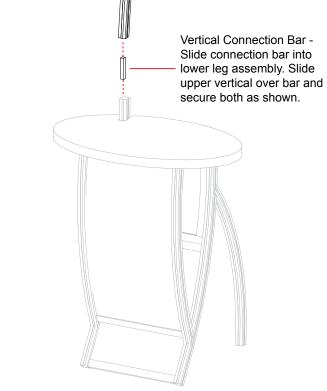



When assembled








WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING


© 2014

Top View

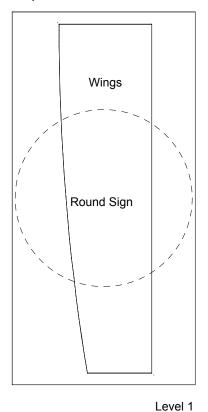

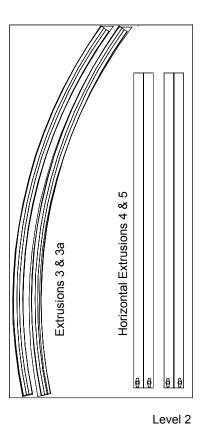

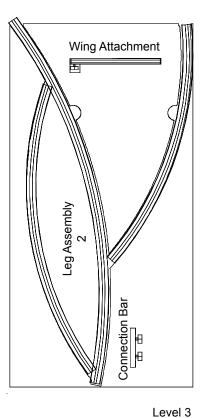


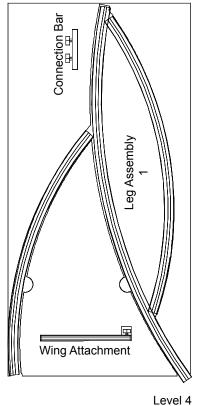

Additional Items:


- Setup Hardware Graphic
- (3) Lights


Top View

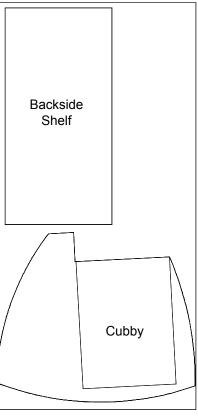



Level 1


Top View of Each Level

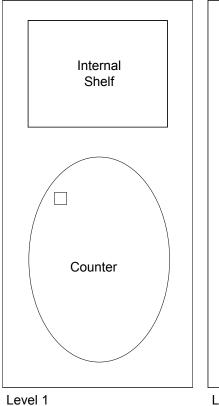

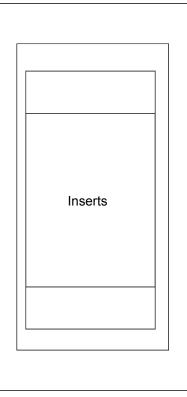

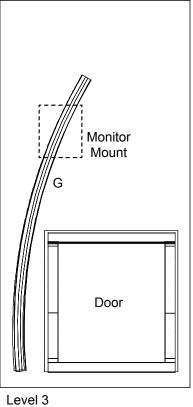

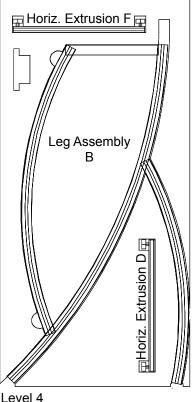

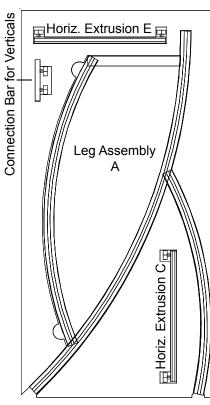

Level 2

Level 4

Level 5

