
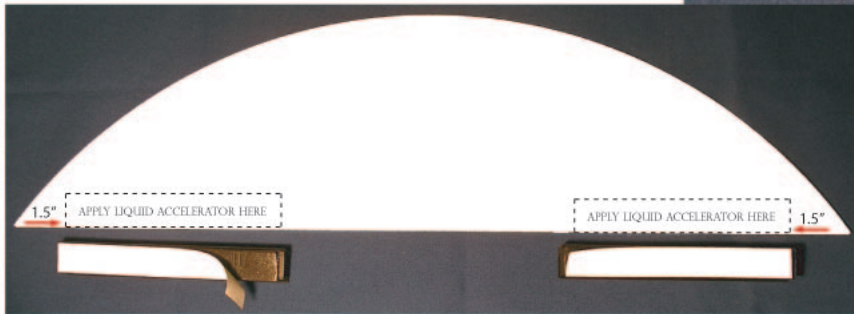


STANDUP HEADER

ASSEMBLY & PACKING INSTRUCTIONS

ONCE YOUR GRAPHIC IS APPLIED TO THE SINTRA (RIGID SUBSTRATE), LAY THE SINTRA ON A FLAT SURFACE, GRAPHIC SIDE DOWN. APPLY LIQUID ACCELERATOR (with sponge tipped applicator) DIRECTLY ON THE BACK SIDE OF THE SINTRA WHERE THE U-CHANNEL WILL BE POSITIONED ~ 1.5" FROM THE OUTSIDE BOTTOM CORNERS. ACCELERATOR SHOULD SIT FOR 5 MINUTES BEFORE APPLYING THE U-CHANNEL. AFTER 5 MINUTES, PEEL TAPE BACK FROM U-CHANNEL. PLACE U-CHANNEL ON SINTRA (open end facing down). ADHESIVE SIDE SHOULD BE PRESSED FIRMLY TO SINTRA WHERE LIQUID ACCELERATOR WAS APPLIED.

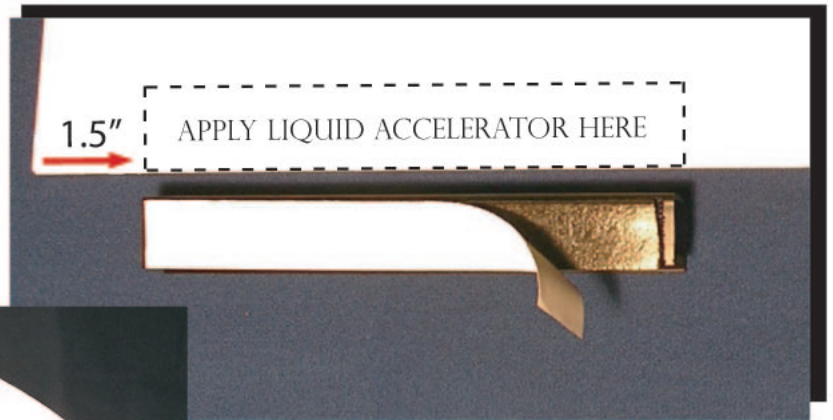

*LIQUID ACCELERATOR SHOULD SIT FOR 5 MINUTES BEFORE ADHERING U-CHANNEL TO SINTRA.
NOTE: USE (1) BOTTLE OF LIQUID ACCELERATOR PER (4) HEADER KITS



Lay unit on flat surface.
Slide display in bag first.
Invert header and place between display and bag with graphic facing outward toward the bag.
Clips/hardware should be laying on top of the display.